



**NEW**

## Outdoor Flammable Cabinets

Engineered for Ultimate Durability and Safety Compliance



30G Outdoor Cabinet



45G Outdoor Cabinet



60G Outdoor Cabinet



90G Outdoor Cabinet

Justrite's outdoor safety cabinets are built to withstand harsh conditions while ensuring regulatory compliance and enhancing workplace safety.

Investing in these cabinets helps reduce the risk of accidents and avoid costly fines from improper hazardous material storage.

# Why do I need an outdoor cabinet?

Improper storage and handling of flammable liquids are significant contributors to industrial fires. Even when stored outdoors, flammable liquids continue to pose a fire hazard.



## • Fires and Explosions:

An open container allows fumes to escape, creating a flammable vapor cloud. Any ignition source, like a spark from electrical equipment, static electricity, or even sunlight, could ignite the vapors, causing a fire or explosion.

## • Contamination of the Environment:

Spills or leaks from open containers can contaminate soil and groundwater, posing serious health risks or damaging the ecosystem, depending on the chemicals involved.

## • Harmful to People:

Flammable chemicals can cause respiratory problems, skin irritation, or poisoning if inhaled or absorbed through the skin. Open containers increase the risk of accidental inhalation or contact.

## • Theft and Arson:

Leaving hazardous chemicals in open spaces can lead to theft or intentional fires.

## • Safe and Compliant:

OSHA, NFPA, IFC and FM approved.



### Warranty

- 10-year Structural
- 1-year Serviceable Parts



**MADE IN THE USA** With US & Imported Parts  
Justrite Safety Group™, the pioneers of workplace fire prevention and containment since 1894.

## Features & Benefits

Justrite's outdoor safety cabinet offers secure, weather-resistant storage for flammable chemicals in outdoor environments. Built to endure harsh weather and impacts, it is OSHA, NFPA, IFC, and FM approved, ensuring reliable protection for chemical storage needs.



### Sturdy Construction

- Fully spot welded Galvanneal 18-gauge steel construction provides corrosion resistance.
- Galvanneal features a zinc-iron alloy coating that resists up to 16 times more corrosion than regular steel.



### Weather Resistant

- Slanted top with rain gutter guides rain or snow away from cabinet interior.
- Durable and chemical resistant UV powder coated paint.




### Reliable and Durable Hinges

- Continuous stainless steel piano hinges ensure your cabinet doors close smoothly and reliably for the life of your cabinet.
- The continuous hinges create even weight distribution that significantly reduce stress on any single point.



### Spill Control & Leak Collection

- Patented SpillSlope® safety shelves direct spills to the back and bottom of the shelf.
- Leakproof sump. 2in (51mm) contains and holds leaks.

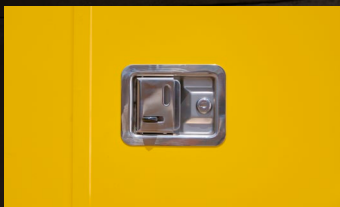


### Keep Contents Secure

- Stainless steel paddle latch handle lock with three-point latching secures the contents.



### Stable Trapezoid Legs

- Durable 12 gauge steel trapezoid legs for stability on uneven surfaces.
- Open design to accommodate forklifts as well as tools to adjust, mount or add accessories.

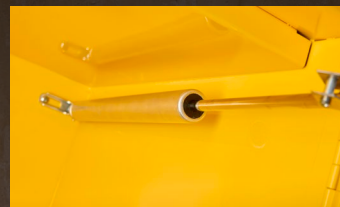

### Automatic Closing Doors

- Fusible links hold doors wide open and melt at 165°F (74°C)
- Automatic closure (on self-closing models) to prevent fire outside the cabinet.



### Stable Shelves

- Welded shelf hangers interlock with the shelf to offer maximum stability.
- Adjustable on 3in. (76mm) centers.
- 350 pound load capacity per shelf.

# Outdoor Flammable Safety Cabinet Vs The Competition

Features:	 Justrite®	Competition
Durable & Chemical Resistant Powder Coat Paint	✓	✓
Slanted TOP with Rain Gutter	✓	✓
Stainless Steel Hinges	✓	✗
Stainless Steel PaddleHandle 3-Point Latch	✓	✗
Fork Liftable Legs	✓	✗
Fully Spot Welded Galvanneal Steel	✓	✓
Vent with Built in Flash Arrestors	✓	✓
Welded Shelf Hangers	✓	✗
Leak Proof Sump	✓	✓
Extra Hem on Door for Seal Protection	✓	✗

Investing in a Justrite outdoor flammable safety cabinet is a smart decision that offers significant long-term cost savings compared to less durable alternatives.



## 1. Reduced Replacement Frequency:

The durable construction and materials means less frequent replacements, saving money over time.

## 2. Lower Maintenance Costs:

Weather-resistant features and materials reduce the need for repairs and maintenance.

## 3. Improved Safety:

Advanced safety features minimize the risk of accidents, potentially lowering insurance costs and avoiding expensive incidents.

## 4. Compliance:

Justrite cabinets meet safety regulations, helping avoid fines and penalties associated with non-compliance.

## Outdoor Flammable Safety Cabinet Models

Capacity	Manual	UPC	Self close	UPC
30 Gallon	846K65	697841272330	846K66	697841272347
45 Gallon	846K67	697841272309	846K68	697841272316
60 Gallon	contact your Grainger Representative	697841272385	contact your Grainger Representative	697841272392
90 Gallon	contact your Grainger Representative	697841272408	contact your Grainger Representative	697841272415

## Try these related products



1. Rolling Cart for 30 Gallon and Piggyback Safety Cabinets  
**84001**

2. 5 Gallon Heavy Duty Cigarette Butt Can  
**26811R**

3. 5 Gallon, DOT Transport Steel Safety Can for Flammables, Type II  
**7350130**

4. 748 Gallon Spill Capacity, QuickBerm®  
**28071**



## Outdoor Flammable Safety Cabinets

Proudly Offered By:

**GRAINGER**<sup>®</sup>

As a leader in safety, the Justrite Safety Group includes these family of safety brands:


**ACCUFORMNMC**  
Justrite Safety Group



**BCI**  
BASIC CONCEPTS INC.  
Justrite Safety Group



**CHECKERS**  
Justrite Safety Group



**HUGHES**  
HUGHES-SAFETY.COM  
Justrite Safety Group



**TRAX**  
Justrite Safety Group



**Jall**  
Justrite Safety Group



**U.S. CHEMICAL STORAGE**  
Justrite Safety Group

