



*their safety is essential.*

Products made to work hard—and built to last.

### PetroPad™ Smart Polymer Spill Pad

Safely Transforming Spill Containment: Easy to use, Easy to move, Easy to dispose.


The PetroPad transforms hazardous hydrocarbons into a non-hazardous solid with its exclusive smart polymer blend, reducing pollution and waste and saving users time and money while maintaining regulatory compliance, making it a flexible and cost-efficient solution for handling and disposal of incidental spills.

- Permanently solidified hydrocarbons will not leach into the environment – no risk of leakage when relocating or emptying
- Captures only hydrocarbons allowing rainwater to pass through making it effective for outdoor usage
- Portable solution; easy to transport from site to site without fear of leakage or mess
- Durable material and robust construction withstands the demands of a rigorous work environment
- Easily wash off built-up dirt and debris
- Tested to prevent leaching (TCLP leachate test for diesel)
- Passes the EPA Paint Filter Test (9095B)\*



\* Dispose of in accordance with all local, state and federal environmental regulations

The smart polymer solidifies hydrocarbons, trapping the pollutants inside the spill pad.

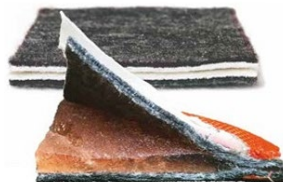


### Smart Polymer Technology

PetroPad utilizes a smart polymer embedded in a geotextile fabric—this innovative technology quickly absorbs then permanently solidifies hydrocarbons. This prevents outflow while allowing uncontaminated water to run through, reducing the volume of pollution and hazardous waste for disposal.




## PetroPad™ Spill Pad

Solidifies incidental oil spills and leaks to prevent ground contamination—added safety for peace of mind.

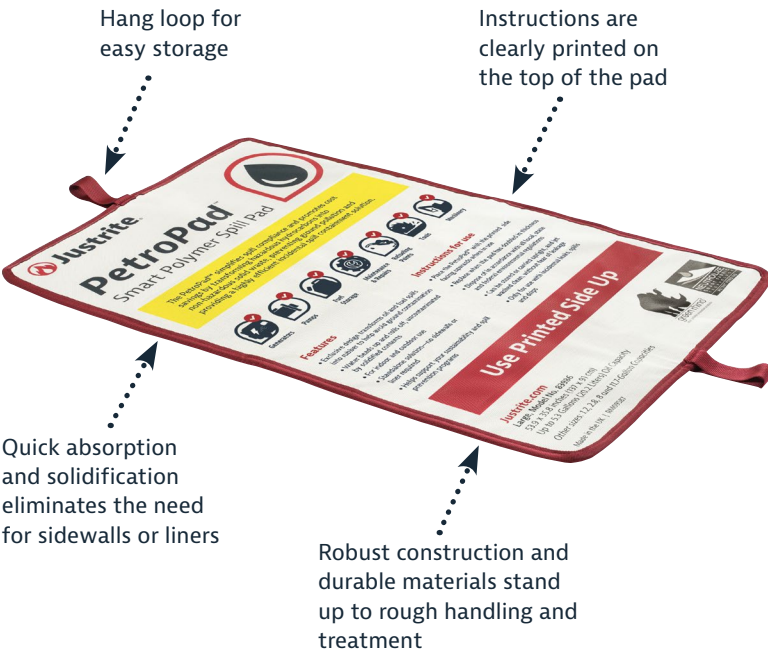

### Applications:

- Pumps
- Refueling points
- Machinery
- Tower lights
- Generators
- Fuel tankers
- Maintenance & repairs
- On-site vehicles

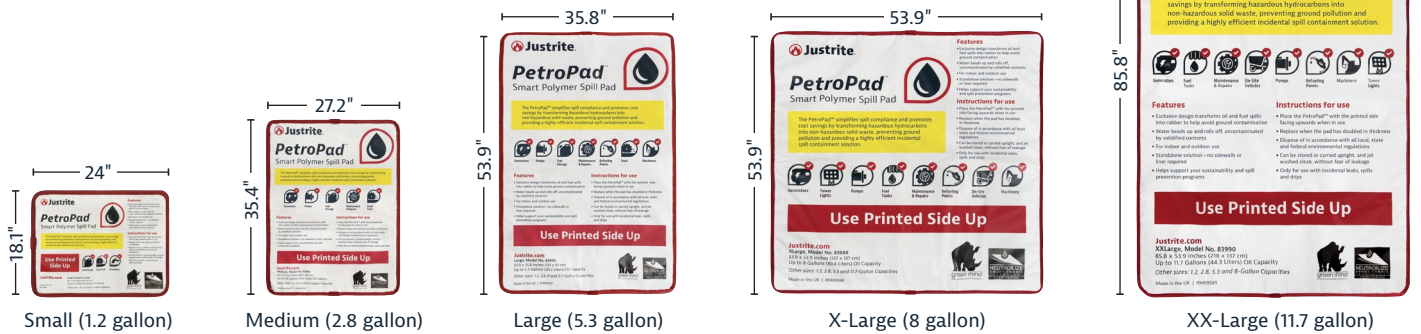

Description	Oil Capacity Gal/L	W x D x H*	Net Weight lb/kg	Single Unit Model	Multi-Pack Model	Multi-Pack Quantity	CA Prop 65
Small PetroPad	1.2/4.5	24 x 0.63 x 18.1 in (610 x 16 x 460 mm)	1.8/0.8	810DU4	810DU9	10	⚠
Medium PetroPad	2.8/10.5	27.2 x 0.63 x 35.4 in (690 x 16 x 900 mm)	4.0/1.8	810DU5	810DV0	5	⚠
Large PetroPad	5.3/20.2	35.8 x 0.63 x 53.9 in (910 x 16 x 1370 mm)	7.1/3.2	810DU6	810DV1	2	⚠
X-Large PetroPad	8/30.4	53.9 x 0.63 x 53.9 in (1370 x 16 x 1370 mm)	11.0/5.0	810DU7	810DV2	2	⚠
XX-Large PetroPad	11.7/44.3	53.9 x 0.63 x 85.8 in (1370 x 16 x 2180 mm)	18.4/8.4	810DU8	—	—	⚠

\* Dimensions do not include loop for hanging. Small size pad includes 1 loop along the width; all other sizes include 2 loops along the height.

⚠ **WARNING:** This product can expose you to chemicals including diisononyl phthalate, which is known to the State of California to cause cancer. For more information go to [www.P65Warnings.ca.gov](http://www.P65Warnings.ca.gov).

