



*their safety is essential.*

Products made to work hard—and built to last.

## Type I Safety Cans

Protect workers and reduce fire risks when transferring, storing and dispensing flammable liquids

- Self-closing, leakproof lid protects vapors from escaping and guards against spills
- Positive-pressure relief cap automatically vents can to guard against rupture or explosion
- Stainless steel flame arrester prevents flashback ignition
- 100% leakproof construction with 10 year limited warranty
- Large label ID zone provides writing space to identify contents (on swinging-handle cans only)
- 24-gauge galvanized steel with tough, chemical-resistant powder-coat finish stands up to rigorous use
- Bottom lip provides grip to support pouring and resists accidental punctures when placed on uneven surfaces
- Extra capacity allows two-cycle engine oil or other additives
- FM approved; UL/ULC listed; accepted under CARB; meet OSHA and NFPA requirements




### Color-Coded Safety Cans to differentiate liquids

Red = Gas, Yellow = Diesel  
Blue = Kerosene, Green = Oil



Optional 2-position polypropylene funnel cans aids in pouring and folds down for compact storage and filling.

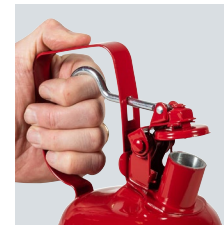

Trigger release handle allows opening and dispensing with one hand.



Swinging handle is centered on the can to make carrying large cans easy.

### Trigger Handle Type I Safety Cans

Capacity	Dimensions (OD x H)	Approvals / Compliance	Red Models	Yellow Models
1 pint (0.5 L)	4.812" x 6.75" (122 x 172 mm)	FM, UL/ULC, TÜV, CARB, OSHA, NFPA 30	3LLD5	10011**
1 quart (1 L)	4.812" x 8.25" (122 x 210 mm)		3AN24	13M353
1 gallon (4 L)	7.25" x 11.5" (184 x 292 mm)	FM, UL/ULC, CARB, OSHA, NFPA 30	6UZN1	—



### Swinging Handle Type I Safety Cans

Capacity	Dimensions (OD x H)	Approvals / Compliance	Red Models	Yellow Models	Blue Models	Green Models
<b>Type I Safety Cans</b>						
1 gallon (4 L)	9.5" x 11" (241 x 279 mm)	FM, UL/ULC, TÜV, CARB, OSHA, NFPA 30	6AV78	13M454	13M456	13M457
2 gallon (7.5 L)	9.5" x 13.75" (241 x 349 mm)		5AC08	13M460	13M462	13M464
2.5 gallon (9.5 L)	11.75" x 11.5" (298 x 292 mm)		6AG08	13M467	13M467	13M471
5 gallon (19 L)	11.75" x 16.875" (298 x 429 mm)		6AW03	5HE22	5HE21	13M479

<b>Type I Safety Cans with Funnel*</b>						
1 gallon (4 L)	9.5" x 11" (241 x 279 mm)	FM, UL/ULC, TÜV, CARB, OSHA, NFPA 30	13M453	13M455	7110310**	13M459
2 gallon (7.5 L)	9.5" x 13.75" (241 x 349 mm)		13M459	13M461	13M463	13M465
2.5 gallon (9.5 L)	11.75" x 11.5" (298 x 292 mm)		13M466	13M468	13M470	13M472
5 gallon (19 L)	11.75" x 16.875" (298 x 429 mm)		13M473	13M475	13M478	13M480

3AG33



3NJY5

Funnels For 1 gallon (4 L) and larger safety cans

Description	Dimensions (OD x H)	Models
Polypropylene funnel	0.5" x 11.25" (13 x 286 mm)	3AG33
Bolt-on funnel with galvanized hose	1" x 14" (25 x 356 mm)	25AZ28

\*Approvals apply to safety can only, not funnel. \*\*Available through Grainger Sourcing

\*\*Available through Grainger Sourcing

Available through

